



### DESCRIPTION

Lubemaster Radiator stop leak prevents rust; stops leak and seals head gasket and engine block.

### BENEFITS

- Prevents rust
- Stops kts
- Seal head gasket and engine block
- Non-clogging formula

### HOW TO USE

Flush & refill cooling system if coolant is more than 18 months old. Remove radiator cap and run engine for 10 mins. Make sure that interior heater is on and set to highest temperature. Shake bottle and add content directly to radiator. Add water if necessary. Run engine at fast to idle to circulate sealer through system until leak stops.

### PROPERTIES

S.No	Properties	Units	Specification
1	Specific gravity @ 68 ° F	-	1.000 - 1.005
2	Flash Point	° F ° C	N/A
3	Boiling Point	° F	212
4	Water Solubility	-	100

### PACKING INFORMATION

- Packing** - Plastic Can /355 ml / 12 nos / Secondary box
- Storage** - Store in Room Temperature. Keep away from Direct UV

(The Information given herein corresponds to the practical experience and to the best of our knowledge. No warranty is expressed or implied regarding accuracy of said data. Owing to differences in local conditions, it is the users responsibility to determine the suitability of the products described herein for their own use. We dis-claim any liability with respect to the use of any material supplied by us).